


Application of the KÖSTER Joint Tape 20 and Joint Tape 30
using KÖSTER KB-Pox Adhesive



Mask both sides of the joint with tape.




Mix the A and B components of KÖSTER KB-Pox Adhesive as stated in the technical guideline to a homogenous color (grey).

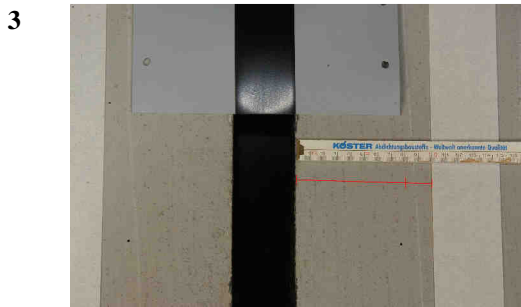

Embed KÖSTER Joint Tape 20 min. 4 cm (Joint Tape 30 min. 5 cm) into the adhesive on each side. Also apply adhesive next to the tape on a width of at least 2 cm.




Apply KÖSTER KB-Pox Adhesive on both sides approx. 2-3 mm thick.

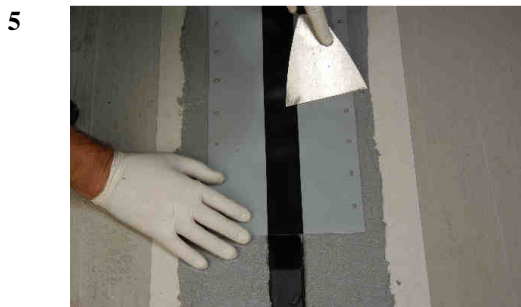

Press the KÖSTER Joint Tape onto fresh adhesive layer.



Immediately apply a second layer of adhesive on top of the tape and overlapping the tape on the sides.

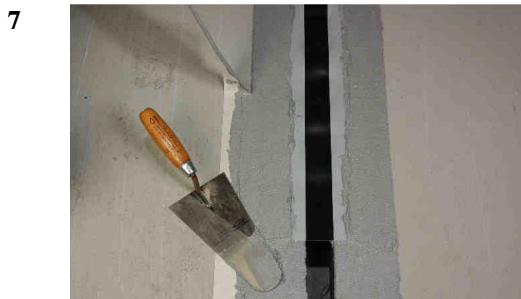

Remove the masking tape on both sides before the adhesive cures in order to achieve a clean finish.




Leave the finished job to cure for approx. 24 hours.




Use KÖSTER KB-Pox Adhesive to overcoat the area which is masked with the black tape.



Remove the black masking tape while the adhesive is fresh.

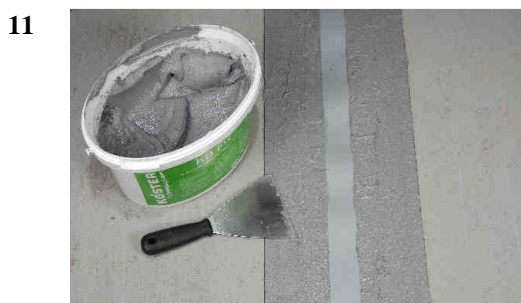

The job is finished.

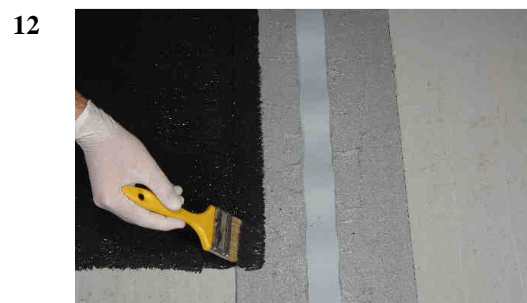

After KÖSTER KB-Pox Adhesive has cured for 24 hours, the water-proofing material can be applied overlapping onto the epoxy layer.